

Calibrate from the printer directly

Step 1.

[Identify the model of your printer](#)

Step 2.

[Select the article for your corresponding printer](#)

Step 3.

Open the related "***Calibrate from the Printer's Interface***" article (e.g. [Printronix T800, T4000, T6000](#))

Note:

Each printer has its own approach of calibrating it.

If you encounter any issues or have any questions, feel free to email us at

support@simplerfid.com !

Revision #13

Created 28 May 2025 23:50:11 by Stan Andrus

Updated 2 July 2026 02:41:31 by Oleksandr Lykhopoi