

Printronix: Darkness

If using wax ribbon, we recommend your darkness is set between 0 and 5.

If using resin ribbon, we recommend your darkness is set between 10 and 15.

Press the green **Pause** button on your printer to open the main menu.

Use the physical navigation keys to navigate to **Settings > Media > Image > Print Intensity**

print intensity

Press the **Enter** key, and use the **Up** and **Down** arrow keys to adjust the value.

If you see the **ENTER SWITCH LOCKED** message, just press the **Up** and **Down** arrow keys at the same time, and you should then see **ENTER SWITCH UNLOCKED**.

Press **Enter** again to apply your settings, then unpause the printer and choose **Save Permanently in Active Config**.

Keep in mind that print quality/darkness is also affected by the Print Speed. The slower the Print Speed, the less energy is needed to transfer the ink; so the Print Intensity should also be lowered accordingly.

Revision #5

Created 9 May 2025 22:14:51 by Jonathan Ordonez

Updated 2 July 2026 01:53:11 by John LeBaron