



TSL Readers: Install Battery for 2128P

Battery Installation



Your reader may have shipped with the battery already installed.

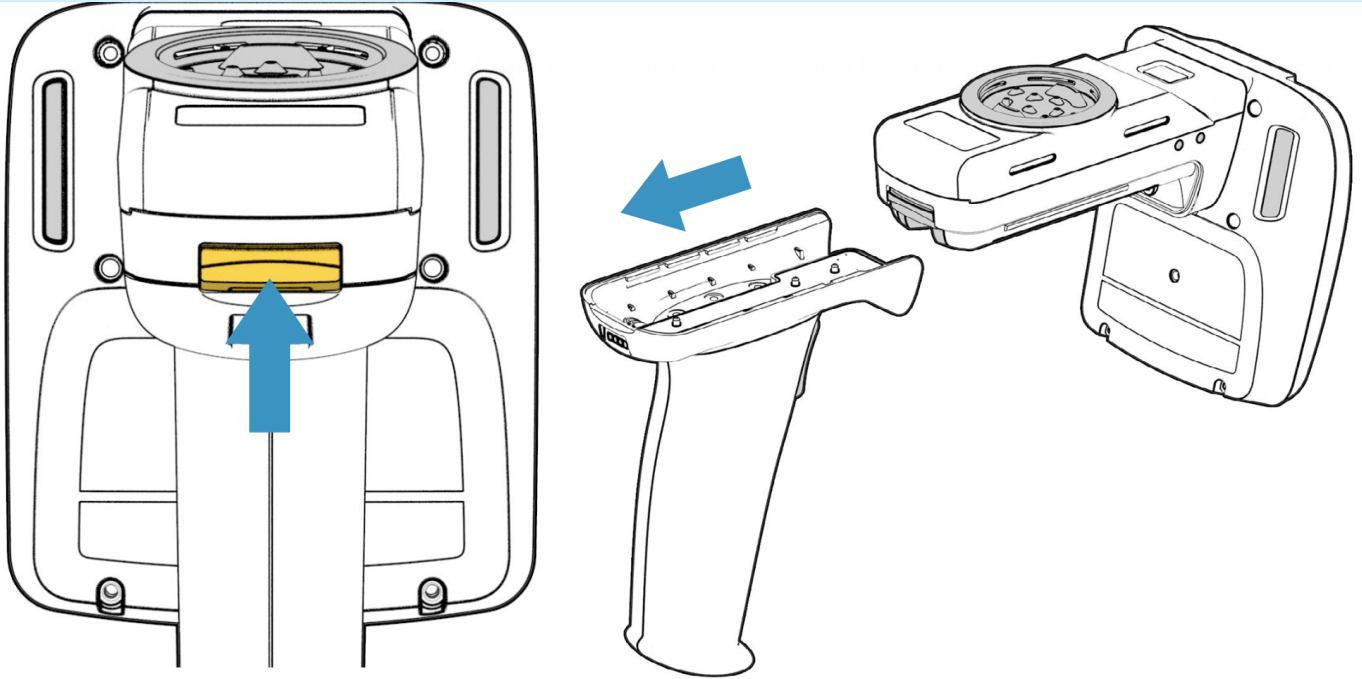


Then, remove the battery cover:

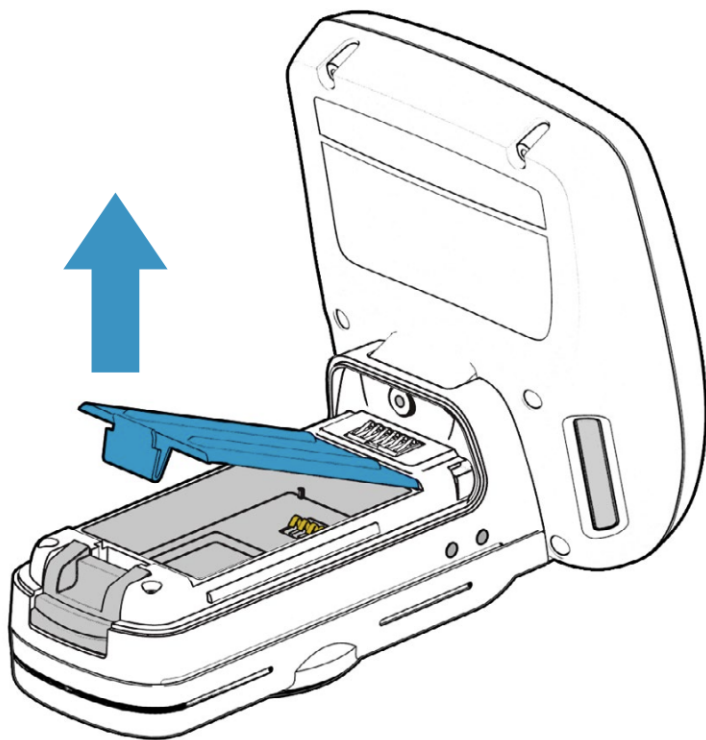

Place the battery in the reader, lining up the pins with the contacts:

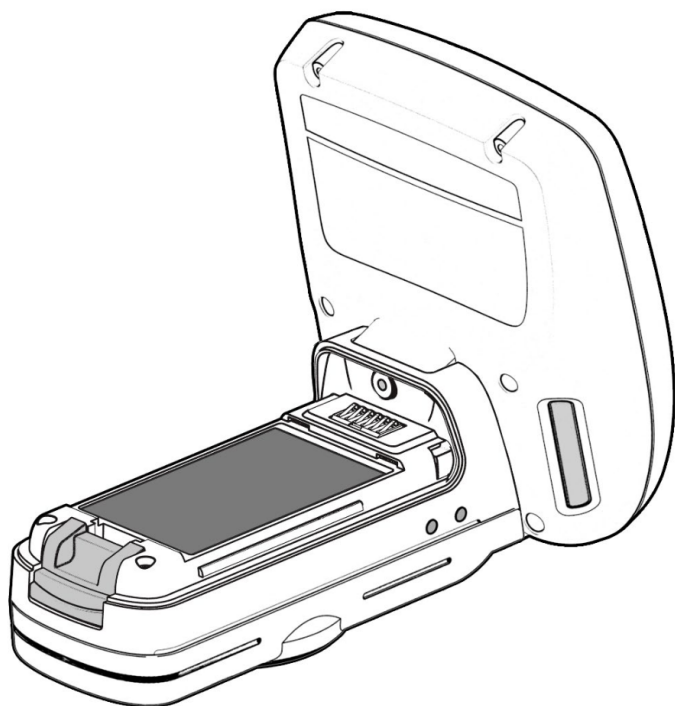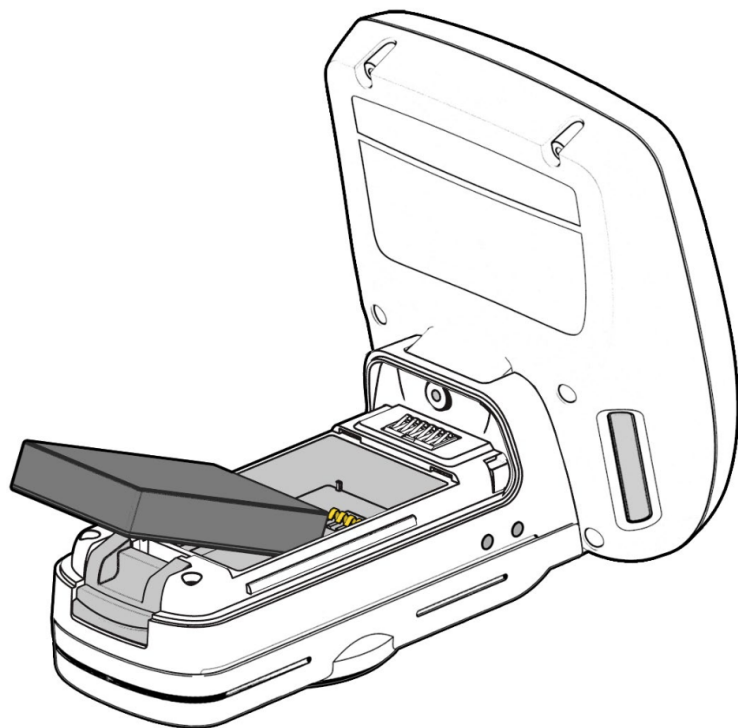

Last, replace the battery cover and the handle:

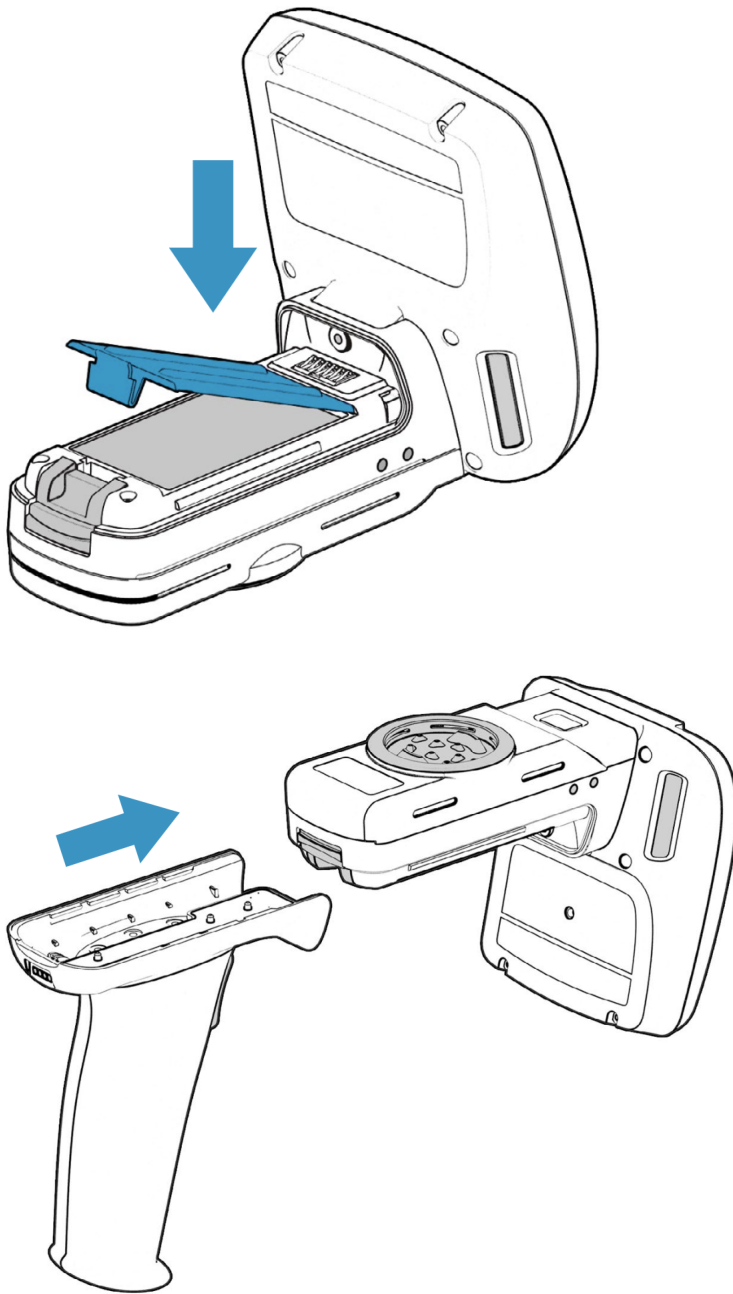

Next, [pair your reader to your device.](#)

Revision #9

Created 29 January 2026 23:17:09 by John LeBaron

Updated 2 July 2026 01:33:27 by Stan Andrus