


Zebra: ZD500R: Manual Calibration

1. Press the button under the HOME symbol.
2. Use the left-right arrow keys to select TOOLS, then press ENTER.
3. Use the left-right arrow keys to navigate to MANUAL CALIBRATION, then press START.
 - The printer should now say LOAD BACKING, PRINTER PAUSED.
4. Open the printer, remove labels from the first three inches of backing. Roll the labels back

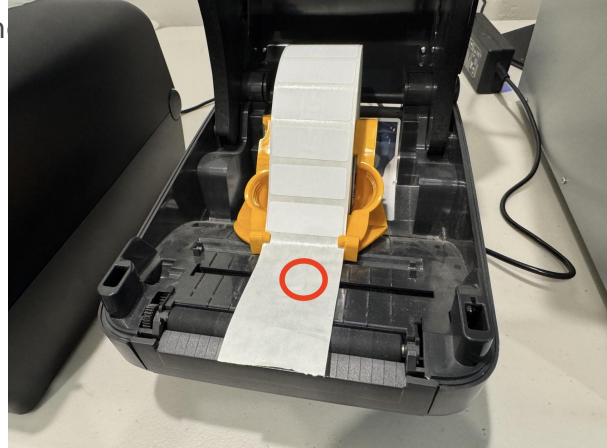

5. Close the printer.
6. Press the Pause button to begin the calibration.
 - The printer will take a few seconds to measure the sensor through the empty backing.
7. When the printer says RELOAD ALL, press Pause again.
 - The printer will feed labels out until it identifies the gap successfully.
8. The manual calibration is now complete. Press the button under the HOME symbol twice to return to the main screen.

Revision #4

Created 26 August 2025 21:02:21 by John LeBaron

Updated 2 July 2026 01:47:45 by Stan Andrus