

Connected Reader


View of connected reader

Once paired, the device appears as a **Connected Reader**, and displays the reader's Serial Number, Firmware Version, & battery power level.

A settings icon navigates to [Reader Settings](#)

Tapping the **Find Reader** button executes a sound from the reader to assist the operator in locating the device.

Clicking the **Disconnect** button terminates the connection to the device.

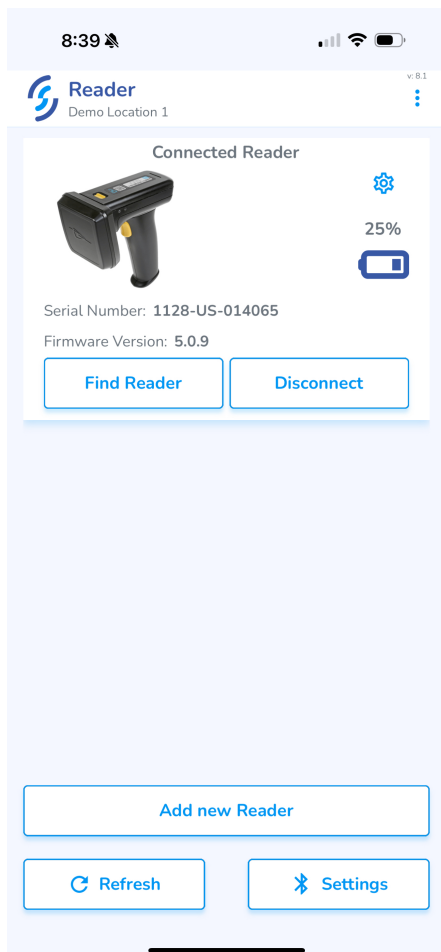

At the bottom of this screen are tools to connect a new device including: **Add new Reader** to [Pair Bluetooth](#), **Refresh** to refresh the available Bluetooth connections, and Settings which navigates to the device's settings menu to enable the Bluetooth.

Revision #18

Created 13 May 2025 02:57:24 by Stan Andrus

Updated 19 May 2025 22:04:07 by Stan Andrus