


# Pair Bluetooth

Steps to connect the handheld RFID reader to the mobile app


---

## iOS


1. **Tap** the *ellipsis*, which are three dots in the top right corner of the app

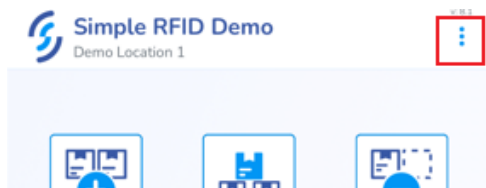

2. **Tap** *Connect Reader*

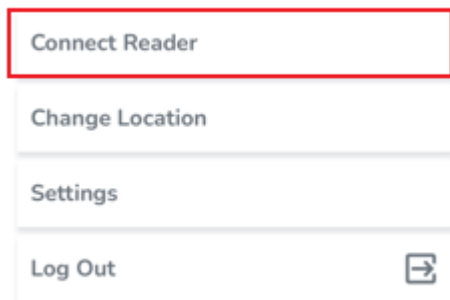


3. **Tap** the *Add new Reader* button

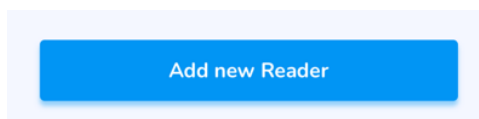

4. **Press** the reader trigger button.

When the trigger is pulled a blue light will begin flashing on the side of the device indicating that the reader is in Bluetooth discovery.

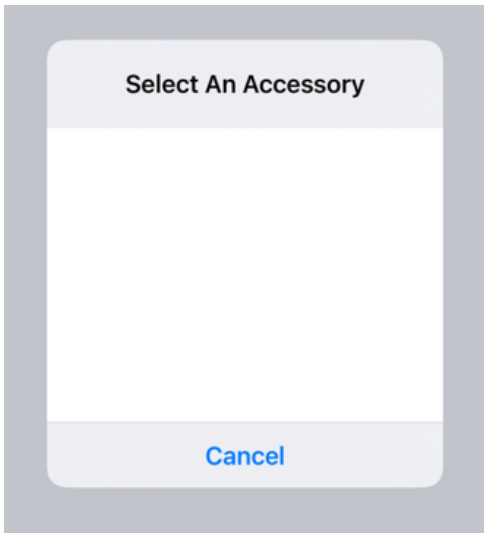


5. From the *Select an Accessory* window **select** the reader Bluetooth option which matches the serial number of your device.

A sticker containing the serial number of the device has been applied to the device.


Once the reader is paired it will be displayed as a [Connected Reader](#), the blue flashing light on the side of the reader will appear solid.

To simplify the pairing process, and automatically pair the reader by pulling the trigger, enable Auto-Reconnect from the [Reader Settings](#) tab

A toast pop-up will appear at the top of the screen indicating that the reader is **connected**.

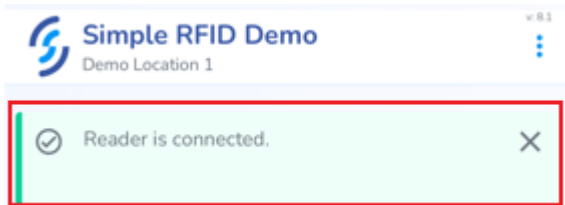


Another toast pop-up will appear when the Bluetooth is **disconnected**.

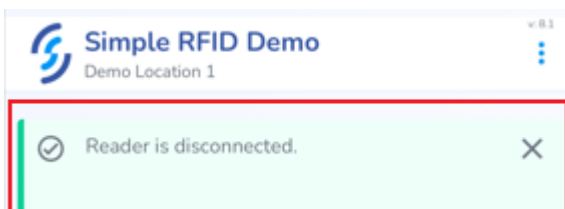

## Android

Steps might differ between different devices


1. **Swipe down** the notification pane

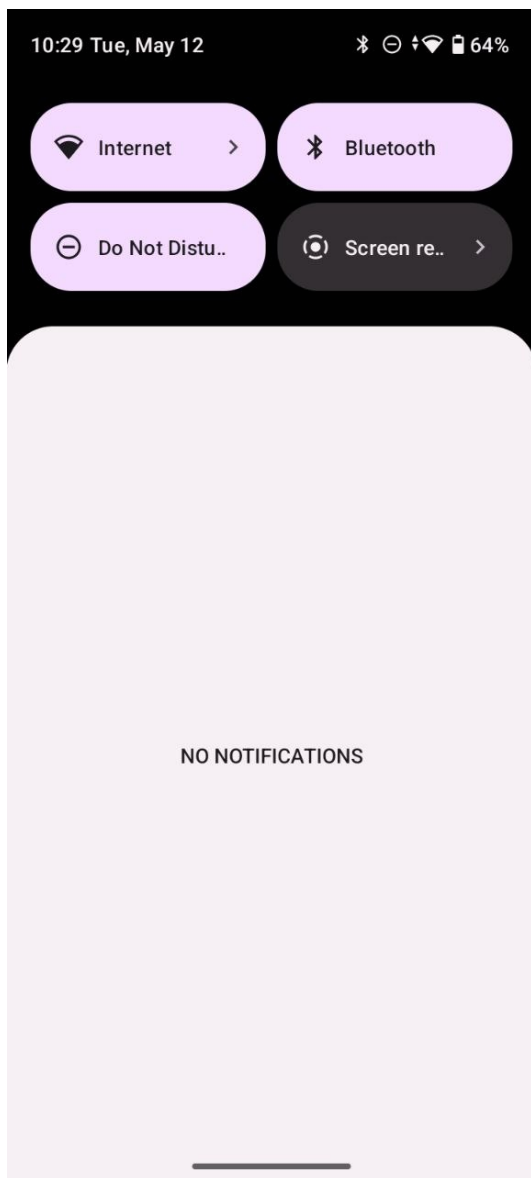

2. **Tap** *Bluetooth* to enable bluetooth


3. **Tap&Hold** "*Bluetooth*" until Bluetooth settings opened (or open Bluetooth settings from the device Settings)

4. **Tap** + *Pair new device*

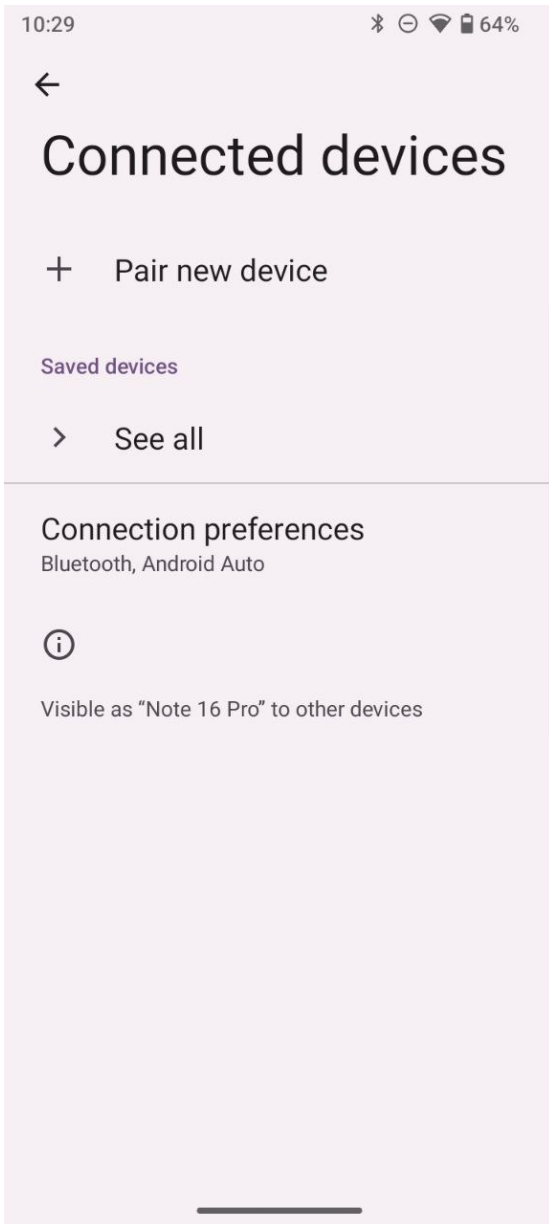


5. **Enable** your reader (e.g. press the trigger button)


6. **Select** the reader from the devices list (e.g. 1128 is displayed as "xxxxxx-US-1128")

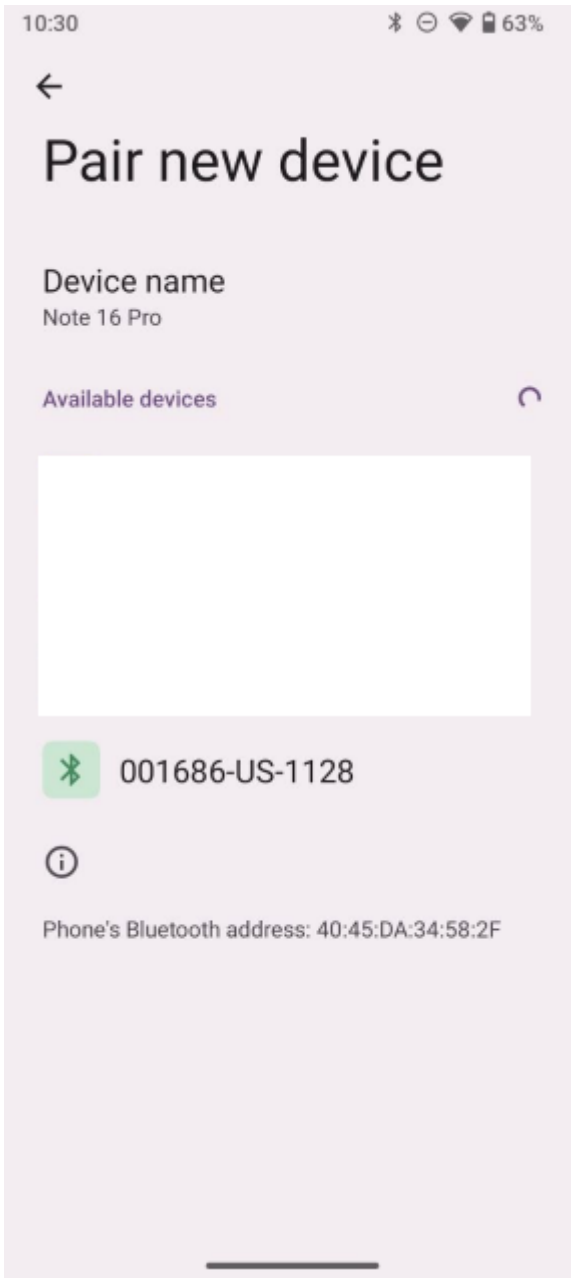

7. **Tap** Pair.


Device should appear in "*Saved devices*" section

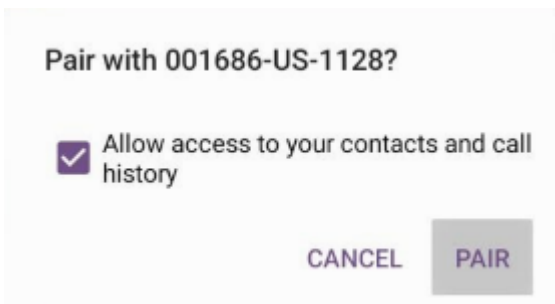

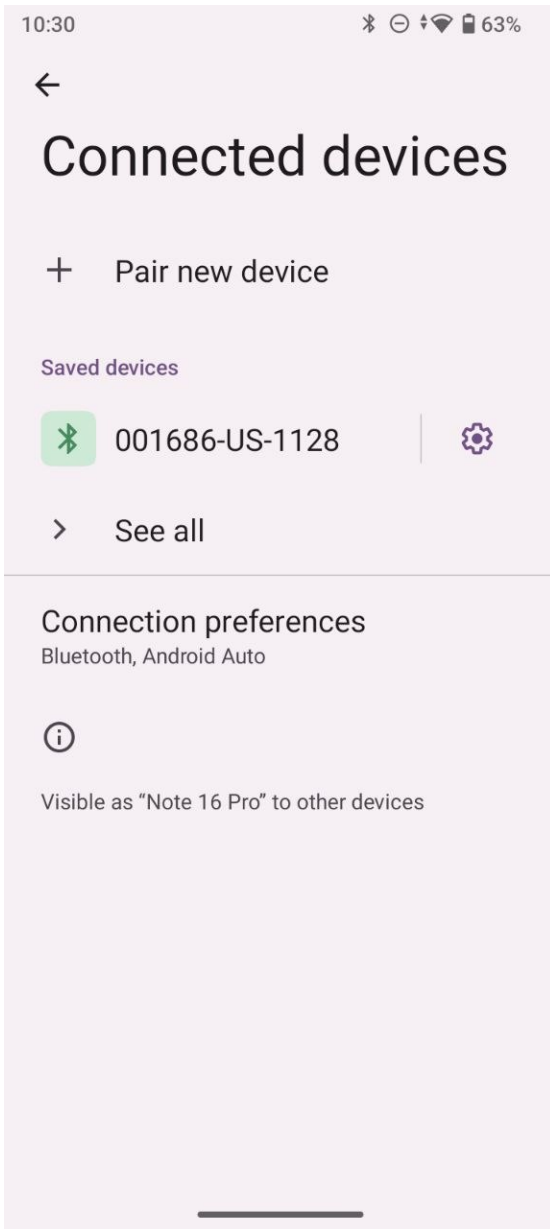


8. **Open** *Simple RFID mobile app*

9. **Login&go to** the *main menu (dashboard)*

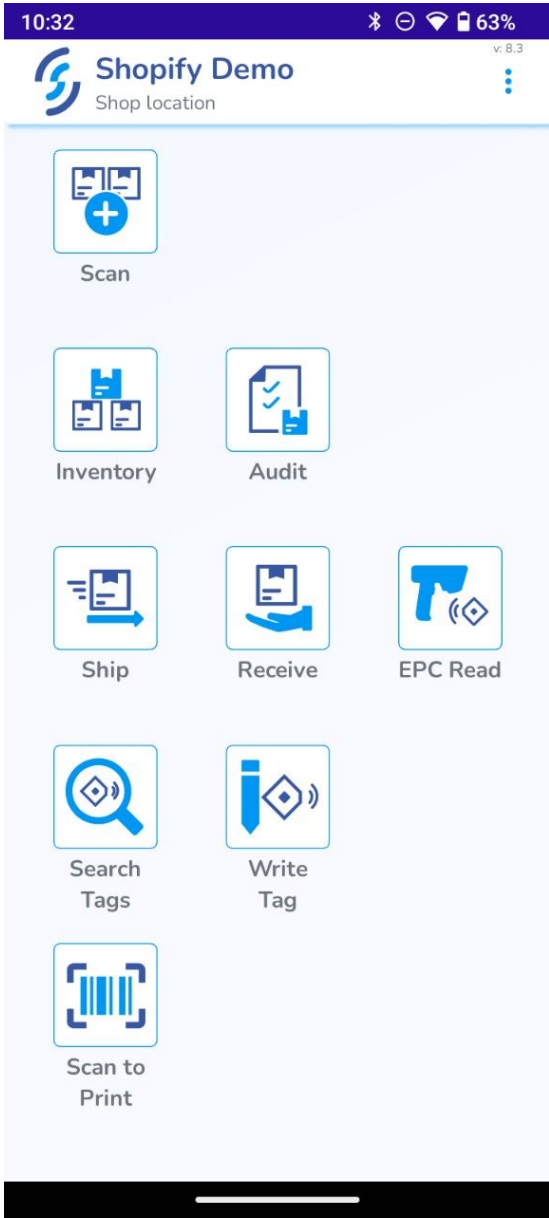

10. **Tap** *three dots* on the top-right

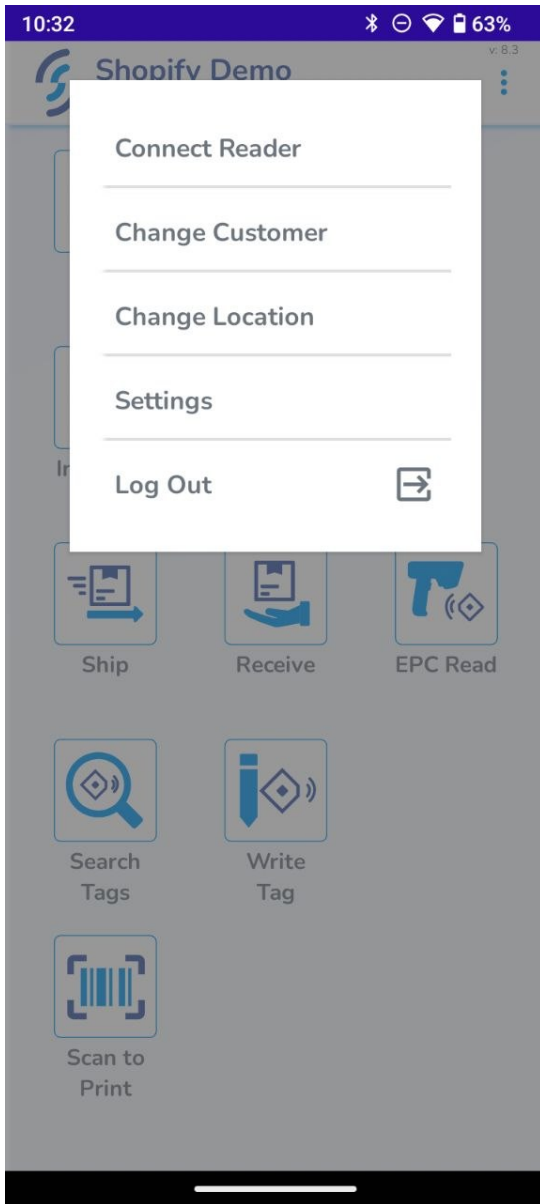


11. **Tap** "Connect reader"

12. **Tap** the *triangle* near the appeared reader



13. **Tap** *Connect*

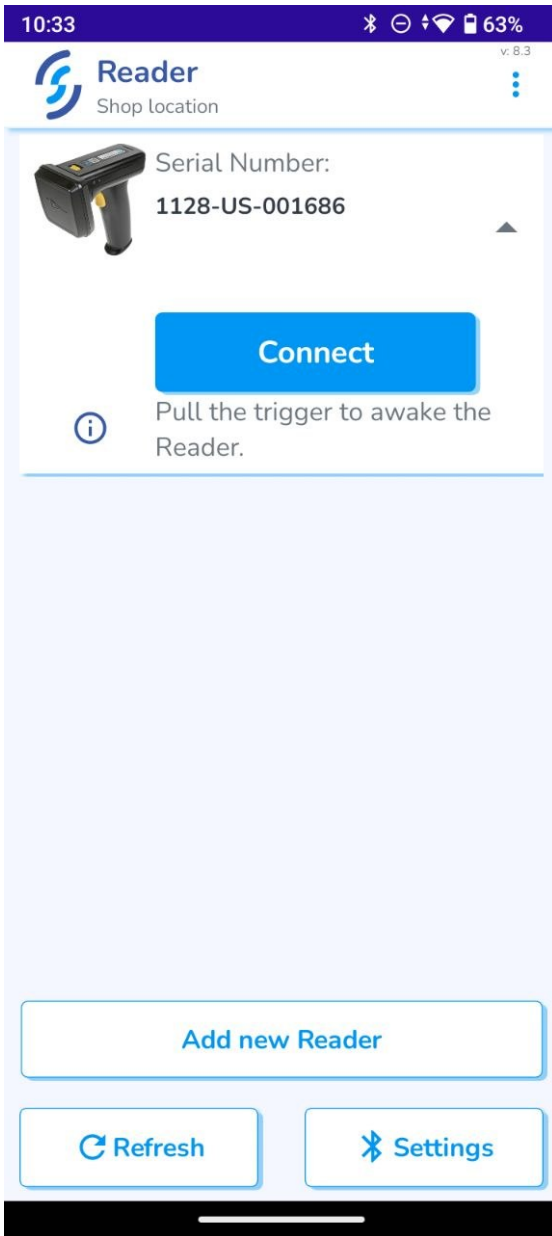

You should see the battery percentage and the toast message "*Reader is connected*". This means that the reader was connected successfully.

To simplify the pairing process, and automatically pair the reader by pulling the trigger, enable **Auto-Reconnect** from the [Reader Settings](#) tab (tap the gear once connected)

If you have any questions, feel free to email [support@simplerfid.com](mailto:support@simplerfid.com)!

Revision #15

Created 13 May 2025 02:15:53 by Stan Andrus

Updated 12 May 2026 08:56:33 by Oleksandr Kozachenko