


# Reader Settings

Access and manage settings for reader

After clicking the settings icon from the **Connected Devices** tab you will be navigated to the Reader Settings

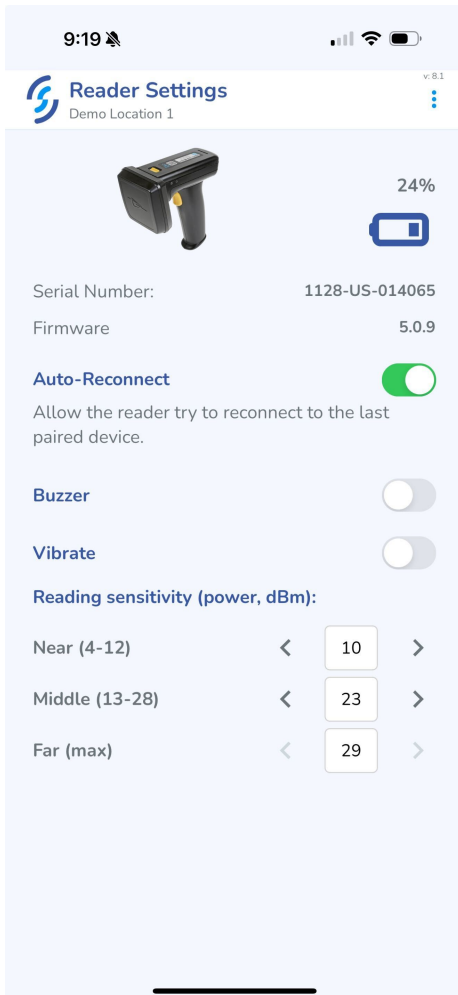

This page provides settings to manage the following:

Battery power percentage & icon, device Serial Number & Firmware Version

The Auto-Reconnect setting streamlines the Bluetooth pairing process by automatically pairing to the device when the trigger is pulled.

If Auto-Reconnect has been enabled for multiple devices, the reader may pair with any of them making it difficult to determine which device the reader is paired with. This can lead to confusion when attempting to pair as the Bluetooth option never appears. To determine if the reader is already paired, check to see if the blue light on the side of the reader is solid

The Buzzer switch enables or disables the device's audio feature

The Vibrate switch enables or disables the device vibrate feature

The Reading sensitivity settings allows to set the default power settings for Near, Middle & Far presets

---

Revision #7

Created 13 May 2025 03:21:28 by Stan Andrus

Updated 19 May 2025 22:04:55 by Stan Andrus