

# Printronix: Alignment

## Step 1:

**Pause** your printer using the green Pause button

Using the arrow and enter keys, navigate to **Settings > Media > Image** and locate the **Vertical Shift** and **Horizontal Shift** settings:

**NOTE:** The values you see here will not necessarily be the values you need to set.

panelLcd

Adjust the values for these settings according to your needs.

- Vertical Shift: **Positive values** will shift the image **up**, and **negative values** will shift the image **down**.
- Horizontal Shift: **Positive values** will shift the image to the **left**, and **negative values** will shift the image to the **right**.
- If you encounter the message **ENTER SWITCH LOCKED**, press the Up and Down arrow keys together, then wait until the screen says **ENTER SWITCH UNLOCKED**. You will then be able to edit these settings.

When you've adjusted these settings **unpause** the printer using the green Pause button, then select **Save permanently in Active Config**

## Step 2:

Try printing another label, and see if any further adjustments are necessary.

After adjusting these settings, the printer will feed a few labels before printing again. This is expected behavior.

---

Revision #6

Created 9 May 2025 22:12:03 by Jonathan Ordonez

Updated 10 September 2025 22:49:25 by John LeBaron