

# Printronix: ENTER SWITCH LOCKED

Printronix printers lock the Enter switch to prevent accidental changes to settings. If you see the **ENTER SWITCH LOCKED** message, just press the **Up** and **Down** arrow keys at the same time, and you should then see **ENTER SWITCH UNLOCKED**.

---

Revision #1

Created 30 July 2025 16:50:04 by John LeBaron

Updated 30 July 2025 16:55:36 by John LeBaron