


# ZD500R: Alignment

## Adjusting the vertical print position on your labels


From the main screen, press the **Home** button (house icon).

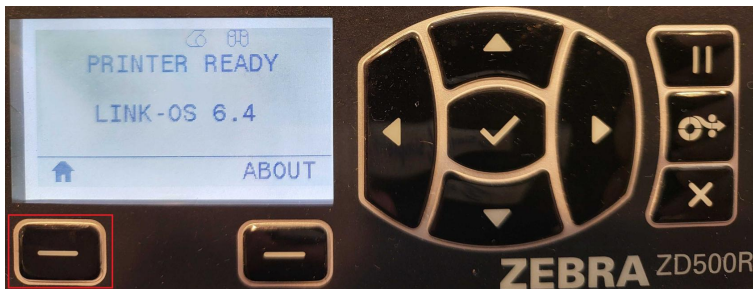


Select **Settings** (gear icon).



Use the **right arrow** on the navigation buttons until you reach **LABEL TOP**.

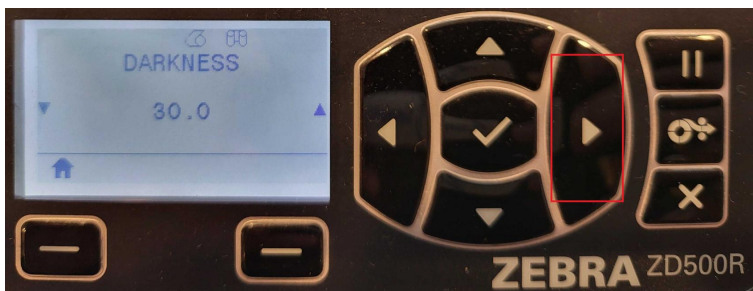

Use the **up/down arrows** to adjust the value:

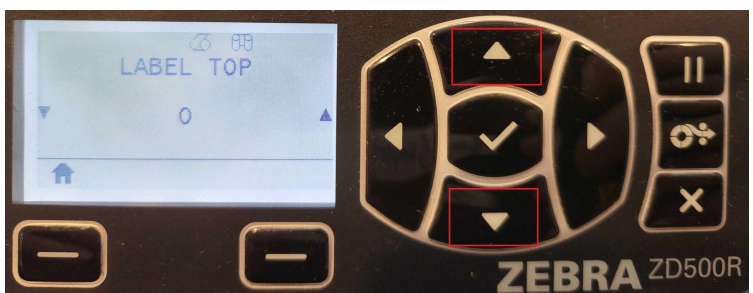

- Negative values move the print **toward the top** of the label.
- Positive values move it **away from the top**.
- Accepted range: **-120 to 120**.

When you're done, press the **Home** button again. Your changes will be automatically saved.

---

Revision #6

Created 4 June 2025 16:37:37 by Jonathan Ordonez

Updated 4 June 2025 17:18:59 by Jonathan Ordonez