

# ZD500R: Calibrate from Printer's Interface

**ATTENTION:** We suggest **first** performing the calibration from the website. If the calibration fails, then follow these steps.

## Step 1: Media Calibration

Hold the PAUSE + CANCEL buttons for 2 seconds to start the media calibration.

## Step 2: RFID Calibration

Press the menu 'Home' (🏠) button. Navigate to the 'RFID' (📶) menu button and press the 'Select' (—) button.

Use the **Left** and **Right** navigation arrows to browse to the RFID CALIBRATE procedure. Press the select button (—) below the **START** on the lower right hand of the display.

The printer will slowly feed a label while adjusting the location and RFID read/write communication settings for your chosen RFID tag/label.

The printer will feed an additional label in some cases when calibration has completed successfully with the display message reading: READY

At this point, you can open the printer and roll the excess labels back inside. Then, close the printer, unpause it, and you will be ready to print.

---

Revision #5

Created 15 May 2025 16:55:46 by John LeBaron

Updated 12 February 2026 22:41:44 by Stan Andrus