

Increase Max Reader Power & Set Reader Sensitivity to Far

If you find that scans are appearing slowly, and or accuracy seems poor, you'll want to set the **Reader power to the maximum output**, and that the **Reading Sensitivity is set to Far**

Prerequisites

- Pair the RFID reader
- Navigate to the Scan View

Scan View

- Click on the Reader Connection icon (shows Bluetooth connection and Battery Power Percentage)
- Click on the Reader Connection button

Connected Devices

- From the Connected Devices page, click on the Reader Settings icon

Reader Settings

- Under the "Far" option, set the Reader power to 30 dBm using the right arrow
- Return back to the Scan View
- Ensure that the reader is set to **Far** range

Revision #5

Created 9 July 2025 21:10:30 by John LeBaron

Updated 1 July 2026 17:37:43 by Stan Andrus