


# Manual Reader Control

If you wish to control the reader via the standard RFID settings, you can enable in the [Application Settings](#) menu

## Manual Reader Control (Pro) Enabled

These controls include;


**Power Slider** which is a single control to manage the reader power dynamically via a slider. Below this, a settings icon to manage the **Scan Mode & Session** of the Reader, and the current settings are displayed to the right of it. To the far right is the button to navigate to the [Connected Reader](#)

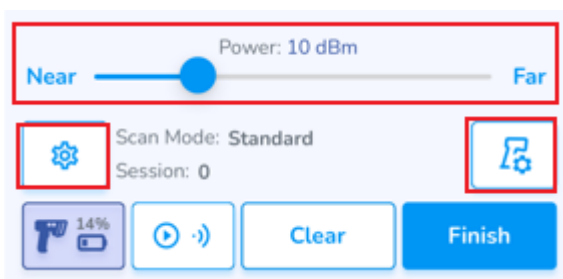

## Session & Scan Mode

Sessions are 0, 1, 2 & 3

Scan Modes are Standard, Tag Focus, Many Tags, & Tag Refresh

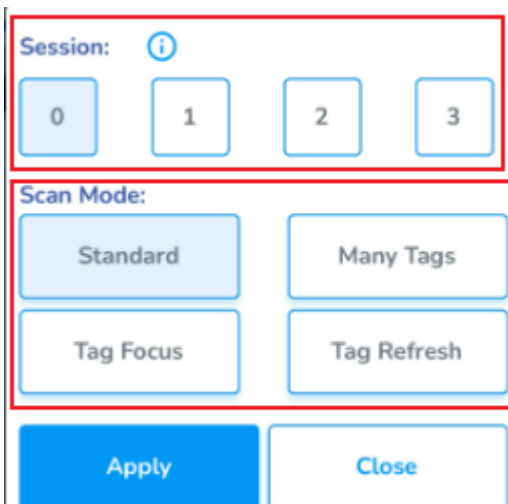

After making selection, click the **Apply** button to save changes

Click **Close** to exit the settings window

Revision #2

Created 18 May 2025 20:38:48 by Stan Andrus

Updated 2 July 2026 01:08:07 by Stan Andrus