

Adjusting the Sleep settings on your host PC

If your host PC keeps disconnecting from the Simple RFID website it's likely that your host PC is going to sleep. Here's how to prevent it.

Windows 11

- From the Windows start menu, search "Sleep" and click the following result:



- In the Settings window that appears, set "When plugged in, put my device to sleep after" to "Never":



Windows 10

- From the Windows start menu search "Sleep"
- Then in the Settings section set the Sleep options to "Never"



Revision #1

Created 13 June 2025 16:49:05 by Stan Andrus

Updated 2 July 2026 01:20:17 by Stan Andrus